

# **TECH ARTICLE**

**Date:** 14/11/2007

**Revision Date (6 months max):** N/A

---

**Topic / Issue:** Default Gateway settings for Dial-in RAS- IPS5200V2

---

**Written By:** Scott Young

**Public Directory:** [www.alloy.com.au](http://www.alloy.com.au)

---

The IPS5200V2 does configure a default gateway by default.

If no default gateway is configured, then RAS dial-in users will not be able to access the internet via a broadband internet connection.

To add a default gateway go to the Routing Table Option and add a route like the following:

Destination	Netmask	Gateway	Interface
0.0.0.0	0.0.0.0	10.0.0.1	Local Network

Gateway being your Broadband Router on the LAN.

---

**Summary:**  
(If required)