



TECH ARTICLE

Date: 14/11/2007

Revision Date (6 months max): N/A

Topic / Issue: How reset Dynalink products to factory default settings- RTA100+, RTA220, RTA300, RTA300W

Written By: Scott Young

The following technical page explains the procedure to reset the Dynalink products to factory default values.

- 1) Power the unit on.
- 2) Use a paper clip or something similar to press the reset button on the back of the unit.
- 3) You will need to keep tapping the reset button continuously for about 5 to 10 seconds.
- 4) The unit will now reboot and have the following default settings.

IP Address: 192.168.1.1
Subnet Mask: 255.255.255.0
Username: admin
Password: admin

Summary:
(If required)