

Getting Started

Network Settings

You can configure the base station to obtain the network settings in one of the following ways:

DHCP----By default, the base station attempts to contact a DHCP server in your network to obtain the valid network settings, e.g. IP address, subnet mask, gateway, DNS server.

Static----If the base station cannot contact a DHCP server for any reason, you need to configure the IP address, subnet mask, gateway, primary DNS and secondary DNS for the base station manually.

To configure the network parameters for the base station manually:

1. Press the **OK** key to enter the main menu, and select **Settings->System Settings->Network**.
2. Enter the system PIN (default: 0000), and press the **Done** soft key.
3. Select **Static** from the **IP Address Type** field.
4. Enter the valid values in the **IP Address, Subnet Mask, Default Gateway, Primary DNS and Secondary DNS** fields.
5. Press the **Save** soft key to accept the change.

Note: The wrong network settings may result in inaccessibility of your phone and may have an impact on the network performance. For more information about these parameters, contact your system administrator.

Handset Registration

The handset in the W52P package is pre-registered to the base station. The internal handset number and the handset name display on the idle screen after turning the handset on.

Note: If your handset is not pre-registered to the base station, you need to register it manually. For more information, refer to Yealink W52P IP DECT Phone User Guide.

Shortcuts

You can press the following predefined shortcut keys to access some frequently used features of your handset when the handset is idle:


- Press  to access the call history.
- Press  to check the line status.
- Press  to place an internal call.
- Press  to access the directory.
- Press  to decrease the ringer volume.
- Press  to increase the ringer volume.

This helps you get quick access to features by pressing the shortcut keys directly without having to scroll through the menu.


For more information, refer to the User Guide available online at:
<http://www.yealink.com/DocumentDownload.aspx?CatId=142&flag=142>.
Copyright ©2013 YEALINK NETWORK TECHNOLOGY CO.,LTD.

Yealink
EASY VOIP

IP DECT Phone W52P & W52H

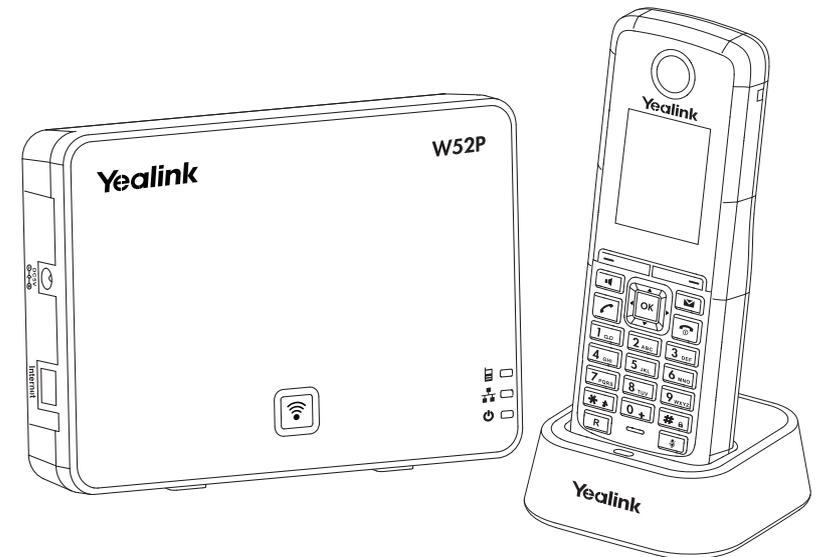

Quick Installation Guide

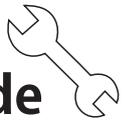

www.yealink.com

Applies to firmware version 10 or later.

Packaging Contents


The following items are included in your W52P package:



W52P/W52H Handset



W52P Base Station

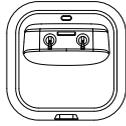


Charger Cradle



Two Power Adapters



 Belt Clip



Ethernet Cable



Two Rechargeable Batteries



Quick Installation Guide & Quick Reference Guide




CD-ROM

The following items are included in your W52H package:



W52P/W52H Handset

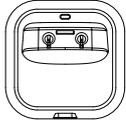

Charger Cradle



Power Adapter



Belt Clip




Two Rechargeable Batteries


Assembling the Phone

1. Connect the network and power for the base station in one of the following ways, as shown below:


a. AC Power Option

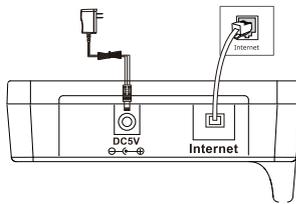


b. PoE (Power over Ethernet) Option

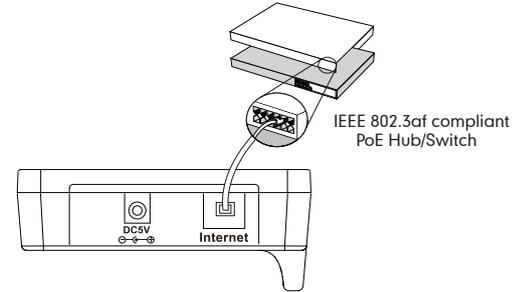


2. Connect the charger cradle, as shown below:

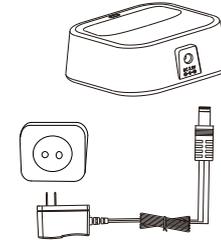

3. Insert the batteries into the handset, as shown below:

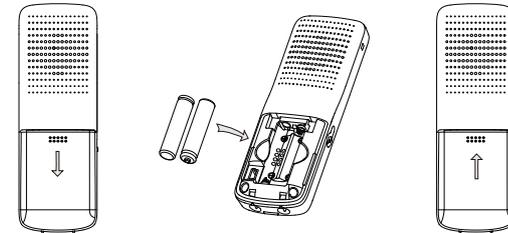

4. Charge the handset, as shown below:

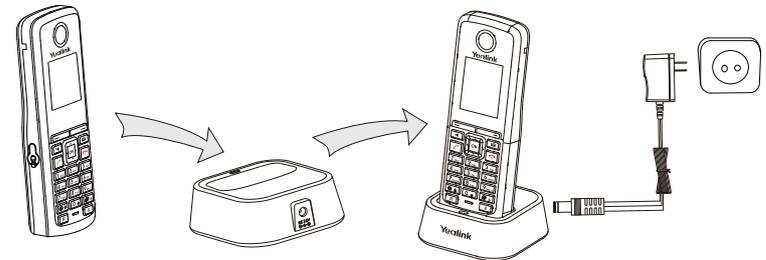

Note: The charging status of the handset is indicated in the top right-hand corner of the LCD screen.