

ATEUS[®] - EASYGATE 3G GATEWAY



- > **Dramatic cost saving**
- > **Connection to UMTS and GSM Networks**
- > **Designed for Motorola UMTS phones**
- > **For PBX or Phone sets**
- > **FSK CLIP**

Dear customer,

Let us congratulate you on having purchased the EasyGate 3G system. EasyGate 3G is deduced from standard EasyGate for GSM networks. Forasmuch as there is no UMTS embedded engine, EasyGate 3G is designed for external UMTS phones from Motorola.

Unfortunately, Motorola UMTS phones don't support some function via the data interface; therefore some EasyGate functions are inaccessible.

Please read EasyGate User Guide and pay attention to following differences:.

Packing List


An **EasyGate 3G** delivery contains the following items:

<i>Item</i>	<i>Number of Pieces</i>
EasyGate	1 pc
Phone holder with belts	1 pc
Supply adapter	1 pc
Telephone cable	1 pc
PC-connection serial cable	1 pc
SMS sending input connector	1 pc
Dowels	2 pcs
Bolts	2 pc
User Manual	1 pc
Quick Installation Guide + mounting pattern	1 pc
Software on a CD-ROM	1 pc
Warranty certificate	1 pc

Basic Functions

- You **cannot** establish data connections (GPRS, CSD), fax connections (PC-FAX) and send/receive SMS using EasyGate in combination with a PC and appropriate software due to disabled serial interface.

Installation

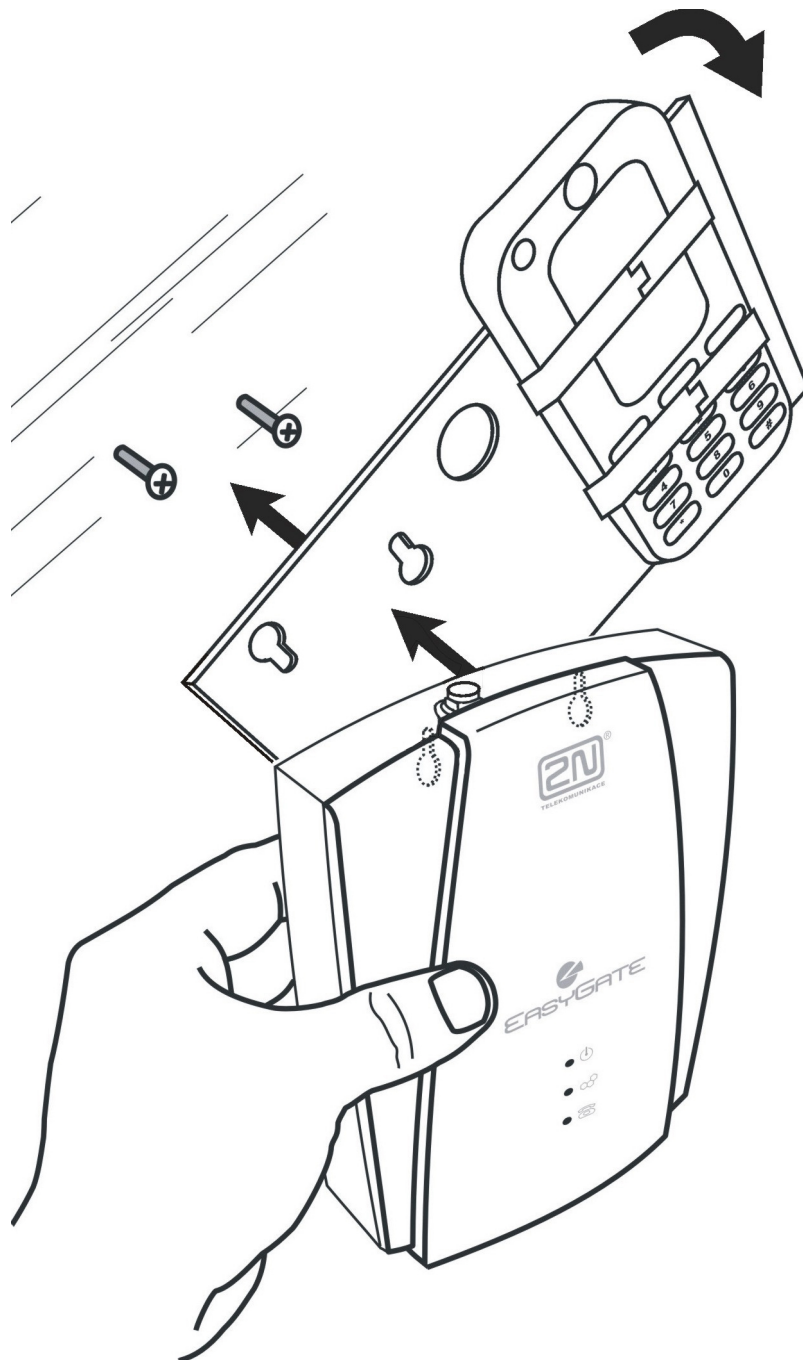

External Antenna Connection

In case of bad signal strength or radio interference on telephone line, install recommended external antenna for used Motorola phone.

SIM Card Installation

Install your UMTS USIM to connected phone.

Unfortunately, Motorola UMTS phones don't support PIN entering via data interface. It is not possible to protect your 3G USIM by PIN, please switch the PIN protection off before connecting to EasyGate 3G.

SIM Card PIN protection

PIN protection isn't possible. Please turn off PIN protection on your USIM.

COM – Serial Interface

COM can be used only for programming the parameters. Serial interface is disabled during normal EasyGate 3G operation.

It is not possible to use COM for:

- CSD PC-PC data transmission;
- PC-FAX-transmission of fax messages from your PC;
- CSD or high-speed GPRS connection to the Internet;
- SMS sending and receiving.

Parameter Tables

Telephone Line Parameters

Transmission volume Function No.: 10
Doesn't work on EasyGate 3G.

Reception volume Function No.: 11
Doesn't work on EasyGate 3G - set up volume manually on the phone.

Service Parameters

COM enable Function No.: 50
COM is disabled during the gateway operation on EasyGate 3G. It can't be enabled.

Security Parameters

PIN - value Function No.: 40
Doesn't work on EasyGate 3G. Motorola UMTS phones don't support PIN entering via data interface. Please switch the PIN protection off before connecting to EasyGate 3G.