

Grandstream Networks, Inc.

GWN7600

Enterprise Wave-2 802.11ac WiFi Access Point

User Manual







COPYRIGHT

©2017 Grandstream Networks, Inc. http://www.grandstream.com

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

The latest electronic version of this guide is available for download here:

http://www.grandstream.com/support

Grandstream is a registered trademark and Grandstream logo is trademark of Grandstream Networks, Inc. in the United States, Europe and other countries.

CAUTION

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this guide, could void your manufacturer warranty.

WARNING

Please do not use a different power adaptor with devices as it may cause damage to the products and void the manufacturer warranty.





FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





GNU GPL INFORMATION

GWN7600 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site: http://www.grandstream.com/support/fag/gnu-general-public-license





Table of Contents

OCUMENT PURPOSE 1	
CHANGE LOG	12
Firmware Version 1.0.3.25	12
Firmware Version 1.0.3.19	12
Firmware Version 1.0.1.36	12
WELCOME	13
PRODUCT OVERVIEW	14
Technical Specifications	14
INSTALLATION	16
Equipment Packaging	16
GWN7600 Access Point Ports	16
Power and Connect GWN7600 Access Point	17
Warranty	17
Wall and Ceiling Mount Installation	18
Wall Mount	18
Ceiling Mount	19
GETTING STARTED	20
LED Patterns	20
Discover the GWN7600	21
Method1: Discover the GWN7600 using its MAC address	21
Method 2: Discover the GWN7600 using GWN Discovery Tool	22
Use the Web GUI	22
Access Web GUI	23
WEB GUI Languages	23
Overview Page	24





Save and Apply Changes	25
USING GWN7600 AS STANDALONE ACCESS POINT	26
Connect to GWN7600 Default Wi-Fi Network	26
Using GWN7600 as Master Access Point Controller	27
Login Page	27
Discover and Pair Other GWN7600 Access Point	28
Failover Master	31
NETWORK GROUPS	33
Network Groups	33
Create an additional SSID under same Network Group	40
CLIENTS CONFIGURATION	41
LED SCHEDULE	42
CAPTIVE PORTAL	44
Policy	44
Files	46
Clients	48
BANDWIDTH RULES	49
SYSTEM SETTINGS	51
Maintenance	51
Basic	5
Upgrade	5
Access	52
Syslog	52
Debug	52
Capture	53
Core Files	5.5





Ping/Traceroute	55
Syslog	56
UPGRADING AND PROVISIONING	58
Upgrading Firmware	58
Upgrading via WEB GUI	58
Upgrading Slave Access Points	58
Provisioning and backup	60
Download Configuration	60
Upload Configuration	60
Configuration Server (Pending)	60
Reset and reboot	61
Syslog	61
EXPERIENCING THE GWN7600 WIRELESS ACCESS POINT	62





Table of Tables

Table 1: GWN7600 Technical Specifications	14
Table 2: GWN7600 Equipment Packaging	16
Table 3: GWN7600 Ports Description	16
Table 4: LED Patterns	20
Table 5: Overview	24
Table 6: Device Configuration	29
Table 7: Basic configuration of group	34
Table 8: Wi-Fi	35
Table 9: LEDs	42
Table 10: policy add	45
Table 11: Bandwidth Rules	49
Table 12: Basic	51
Table 13: Upgrade	51
Table 14: Access	52
Table 15: Syslog	52
Table 16: Debug	53
Table 17: Network Upgrade Configuration	58





Table of Figures

Figure 1: GWN7600 Ports	16
Figure 2: Connecting GWN7600	17
Figure 3: Wall Mount – Steps 1 & 2	18
Figure 4: Wall Mount – Steps 3 & 4	18
Figure 5: Wall Mount – Steps 5 & 6	18
Figure 6: Ceiling Mount – Steps 1 & 2	19
Figure 7: Ceiling Mount – Step 3	19
Figure 8: Ceiling Mount – Step 4	19
Figure 9: Ceiling Mount – Steps 5 & 6	19
Figure 10: Discover the GWN7600 using its MAC Address	21
Figure 11: GWN Discovery Tool	22
Figure 12: GWN7600 Web GUI Login Page	23
Figure 13: GWN7600 Web GUI Language (Login page)	23
Figure 14: GWN7600 Web GUI Language (Web Interface)	24
Figure 15: GWN7600's Dashboard	24
Figure 16: Apply Changes	25
Figure 17: MAC Tag Label	26
Figure 18: Login Page	27
Figure 19: Setup Wizard	28
Figure 20: Discover and Pair GWN7600	28
Figure 21: Discovered Devices	29
Figure 22:GWN7600 online	29
Figure 23: Failover Master	31
Figure 24: Failover Mode GUI	32
Figure 25: Network Group	33
Figure 26: Add a New Network Group	34
Figure 27: Device Membership	38
Figure 28: WiFi Schedule	39
Figure 29: Add AP to Network Group	39
Figure 30: Additional SSID	40
Figure 31: Additional SSID Created	40
Figure 32: Ban/Unban Client	41
Figure 33: Paginate between client's list	41
Figure 34: LED Scheduling Sample	43
Figure 35: Captive Portal policy	44
Figure 36: Add a new policy	45
Figure 37: Captive Portal Files	47





Figure 38: Captive Portal Clients	48
Figure 39: MAC Address Bandwidth rule	50
Figure 40: Bandwidth Rules	
Figure 41: Capture page	
Figure 42: Capture Files	
Figure 43: IP Ping	
Figure 44: IP Traceroute	
Figure 45: Syslog	57
Figure 46: Access Points	





DOCUMENT PURPOSE

This document describes how to configure the GWN7600 via Web GUI in standalone mode, with other GWN76XX Access Points as Master/Slave architecture and more. The intended audiences of this document are network administrators. Please visit http://www.grandstream.com/support to download the latest "GWN7600 User Manual".

This guide covers following topics:

- Product Overview
- Installation
- Getting Started
- Using GWN7600 as Standalone Access Point
- Using GWN7600 as Master Access Point Controller
- Network Groups
- Client Configuration
- System Settings
- LED Schedule
- Captive Portal
- Bandwidth Rules
- Upgrading and Provisioning
- Experiencing the GWN7600 Wireless Access Point





CHANGE LOG

This section documents significant changes from previous versions of the GWN7600 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.3.25

No major changes.

Firmware Version 1.0.3.19

- Added support for captive portal [CAPTIVE PORTAL]
- Added support for 802.11k/r/v [Enable Voice Enterprise]
- Added support for failover master [Failover Master]
- Added support for VLAN assignment via RADIUS [Enable Dynamic VLAN]
- Added support for Select SSID Band [SSID Band]
- Added support for Exact Radio Power Configuration in dBm [Custom Wireless Power]
- Added support for AP Location [AP Location]
- Added support for Per-Client/Per-SSID bandwidth rules [BANDWIDTH RULES]
- Added option to limit clients count per SSID [Wireless Client Limit]
- Added support for WiFi Schedule [WiFi Schedule]
- Added support for LED control [LED SCHEDULE]
- Added option to enable/disable DHCP option 66 & 43 override [DHCP options 66 and 43 override]

Firmware Version 1.0.1.36

This is the initial version.





WELCOME

Thank you for purchasing Grandstream GWN7600 Enterprise Wireless Access Point. The GWN7600 is a mid-tier Wave-2 802.11ac WiFi access point for small to medium sized businesses, multiple floor offices, commercial locations and branch offices. It offers dual-band, 2x2:2 MU-MIMO with beam-forming technology and a sophisticated antenna design for maximum network throughput and expanded Wi-Fi coverage range.

To ensure easy installation and management, the GWN7600 uses a controller-less distributed network management design in which the controller is embedded within the product's web user interface. This allows each access point to manage a network of up to 30 GWN76XX series APs independently without needing separate controller hardware/software and without a single point-of-failure. This wireless access point can be paired with any third party routers as well as Grandstream GWN series routers. With support for advanced QoS, low-latency real-time applications, 450+ concurrent client devices per AP and dual Gigabit network ports with PoE, the GWN7600 is an ideal WiFi access point for medium wireless network deployments with medium-to-high user density.



Caution:

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.





PRODUCT OVERVIEW

Technical Specifications

Table 1: GWN7600 Technical Specifications

	·
Wi-Fi Standards	IEEE 802.11 a/b/g/n/ac (Wave-2)
Antonnoo	2x 2.4 GHz, gain 3 dBi, internal antenna
Antennas	2x 5 GHz, gain 3 dBi, internal antenna
	IEEE 802.11ac: 6.5 Mbps to 877 Mbps
	IEEE 802.11a: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
	IEEE 802.11n: 6.5 Mbps to 300 Mbps; 400 Mbps with 256-QAM on 2.4GHz
	IEEE 802.11b: 1, 2, 5.5, 11 Mbps
Wi-Fi Data Rates	IEEE 802.11g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
	*Actual throughput may vary depending on many factors including environmental conditions, distance between devices, radio interference in the operating environment and mix of devices in the network.
Fraguency Rands	2.4GHz radio : 2.400 - 2.4835 GHz
Frequency Bands	5GHz radio: 5.150 - 5.250 GHz, 5.725 - 5.850 GHz
Channel Bandwidth	2.4G: 20 and 40 MHz
Channel Bandwidth	5G: 20,40 and 80 MHz
Wi-Fi and System	WEP, WPA/WPA2-PSK, WPA/WPA2-Enterprise (TKIP/AES), anti-hacking
Security	secure boot and critical data/control lockdown via digital signatures, unique
	security certificate and random default password per device.
MIMO	2x2:2 2.4GHz, 2x2:2 5GHz
Coverage Range	Up to 541ft. (165 meters)
	5G: 22dBm
Maximum TX Power	2.4G: 22dBm
	*Maximum power varies by country, frequency band and MCS rate.
	2.4G
Receiver Sensitivity	802.11b: -99dBm @1Mbps,-91dBm @11Mbps; 802.11g: -93dBm@6Mbps,
	-75dBm @54Mbps; 802.11n 20MHz: -72dBm@MCS7; 802.11n 40MHz: -69dBm
	@MCS7





	5G
	802.11a: -91dBm @6Mbps, -74dBm @54Mbps; 802.11ac 20MHz: -67dBm
	@MCS8; 802.11ac HT40: -63dBm@MCS9; 802.11ac 80MHz: -60dBm @MCS9
BSSID	16 SSIDs per radio
Concurrent Clients	450+
Network Interfaces	2x autosensing 10/100/1000 Base-T Ethernet Ports
Auxiliary Ports	1x USB 2.0 port, 1x Reset Pinhole, 1x Kensington lock
Mounting	Indoor wall mount or ceiling mount, kits included
LEDs	3 tri-color LEDs for device tracking and status indication
Network Protocols	IPv4, 802.1Q, 802.1p, 802.1x, 802.11e/WMM
QoS	802.11e/WMM, VLAN, TOS
Network	Embedded controller in GWN7600 allows it to auto-discover, auto-provision and
Management	manage up to 30 GWN7600s in a network
Power and Green	DC Input: 24VDC/1A
Energy Efficiency	Power over Ethernet (802.3af) compliant
Ellergy Efficiency	Maximum Power Consumption: 13.8W
Temperature	Operation: 0°C to 40°C
	Storage: -10°C to 60°C
& Humidity	Humidity: 10% to 90% Non-condensing
Physical	Unit Dimension: 205.3 x 205.3 x 45.9mm; Unit Weight: 526g Unit + Mounting Kits Dimension: 205.3 x 205.3 x 53.9mm; Unit + Mounting Kits Weight: 610g Entire Package Dimension: 228.5*220*79mm; Entire Package Weight: 854g
Package Content	GWN7600 Wave-2 802.11ac Wireless AP, Mounting Kits, Quick Installation Guide
Compliance	FCC, CE, RCM, IC





INSTALLATION

Before deploying and configuring the GWN7600, the device needs to be properly powered up and connected to the network. This section describes detailed information on installation, connection and warranty policy of the GWN7600.

Equipment Packaging

Table 2: GWN7600 Equipment Packaging

Main Case	Yes (1)
Mounting Bracket	Yes (1)
Ceiling Mounting Bracket	Yes (1)
Plastic Expansion Bolt	Yes (3)
M3 NUT	Yes (3)
Screw (PM 3 x 50)	Yes (3)
Screw (PM 3.5 x 20)	Yes (3)
Quick Installation Guide	Yes (1)
GPL License	Yes (1)

GWN7600 Access Point Ports



Figure 1: GWN7600 Ports

Table 3: GWN7600 Ports Description

Port	Description
Power	Power adapter connector (24V, 1A)
NET/PoE	Ethernet RJ45 port (10/100/1000Mbps) supporting PoE (802.3af).
NET	Ethernet RJ45 port (10/100/1000Mbps) to your router or another GWN7600 series
- ←	USB 2.0 port (for future IOT & location based applications)
RESET	Factory reset button. Press for 7 seconds to reset factory default settings.





Power and Connect GWN7600 Access Point

Step 1:

Connect one end of a RJ-45 Ethernet cable into the NET or PoE/NET port of the GWN7600.

Step 2:

Connect the other end of the Ethernet cable(s) into a LAN port to your Network.

Step 3:

Connect the 24V DC power adapter into the power jack on the back of the GWN7600. Insert the main plug of the power adapter into a surge-protected power outlet.

Note: GWN7600 can be powered using PoE (802.3af) switch via PoE/NET port. In this scenario, GWN7600 should be connected to the router using NET port.

Step 4:

Wait for the GWN7600 to boot up and acquire an IP address from the DHCP Server.

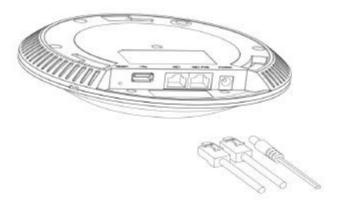


Figure 2: Connecting GWN7600

Warranty

If the GWN7600 Wireless Access Point was purchased from a reseller, please contact the company where the device was purchased for replacement, repair or refund. If the device was purchased directly from Grandstream, contact our Technical Support Team for a RMA (Return Materials Authorization) number before the product is returned. Grandstream reserves the right to remedy warranty policy without prior notification.





Wall and Ceiling Mount Installation

GWN7600 can be mounted on the wall or ceiling, please refer to the following steps for the appropriate installation.

Wall Mount

Step1:

Position the mounting bracket at the desired location on the wall with the arrow pointing up.

Step 2:

Use a pencil to mark the four mounting holes (screw holes DI. 5.5mm, reticle hole DIA 25mm).

Step 3:

Insert screw anchors into the 5.5 mm holes. Attach the mountin bracket to the wall by inserting the screws into the anchors.

Step 4:

Connect the power cable and the Ethernet cable (RJ45) to the correct ports of your GWN7600.

Step 5:

Align the arrow on the GWN7600AP with the arrow on the locking tab of the mounting bracket and ensure that your GWN is firmly seated on the mounting bracket.

Step 6:

Turn the GWN clockwise until it locks into place and fits the locking tab.

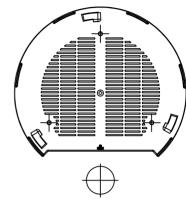


Figure 3: Wall Mount - Steps 1 & 2

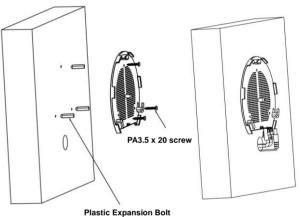


Figure 4: Wall Mount - Steps 3 & 4

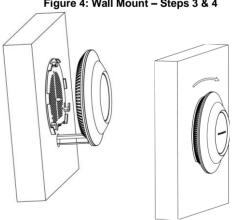


Figure 5: Wall Mount - Steps 5 & 6





Ceiling Mount

Step 1:

Remove the ceiling tile.

Step 2:

Place the ceiling backing plate in the center of the ceiling tile and mark the mounting screw holes (screw holes DIA 5.5mm, reticle hole DIA 25mm).

Step 3:

Insert the screws through the mounting bracket.

Step 4:

Connect the power cable and the Ethernet cable (RJ45) to the correct ports of your GWN7600.

Step 5:

Align the arrow on the GWN7600AP with the arrow on the locking tab of the mounting bracket and ensure that your GWN is firmly seated on the mounting bracket and connect the network and power cables.

Step 6:

Turn the GWN clockwise until it locks into place and fits the locking tab.



Ceiling mounting is recommended for optimal coverage performance.

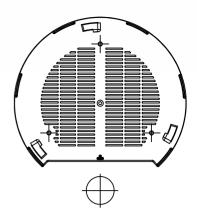


Figure 6: Ceiling Mount - Steps 1 & 2

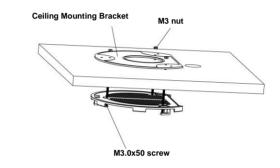


Figure 7: Ceiling Mount - Step 3

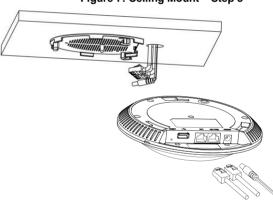


Figure 8: Ceiling Mount - Step 4

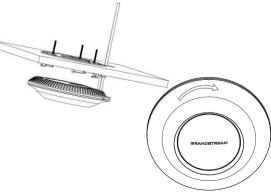


Figure 9: Ceiling Mount - Steps 5 & 6





GETTING STARTED

The GWN7600 Wireless Access Point provides an intuitive web GUI configuration interface for easy management to give users access to all the configurations and options for the GWN7600's setup.

This section provides step-by-step instructions on how to read LED patterns, discover the GWN7600 and use its Web GUI interface.

LED Patterns

The panel of the GWN7600 has different LED patterns for different activities, to help users read the status of the GWN7600 whether it's powered up correctly, provisioned, in upgrading process and more, for more details please refer to the below table.

Table 4: LED Patterns

LED Status	Indication
OFF	Unit is powered off or abnormal power supply.
Blinking green	Firmware update in progress.
Solid green	Firmware update successful.
Blanking red	Delete slave paring
Solid red	Firmware update failed.
Blinking pink	Unit not provisioned.
Solid pink	Unit not paired
Blinking blue	Unit provisioning in progress.
Solid blue	Unit is provisioned successfully.





Discover the GWN7600

Once the GWN7600 is powered up and connected to the Network correctly, users can discover the GWN7600 using one of the below methods:

Method1: Discover the GWN7600 using its MAC address

- 1. Locate the MAC address on the MAC tag of the unit, which is on the underside of the device, or on the package.
- From a computer connected to same Network as the GWN7600, type in the following address using the GWN7600's MAC address on your browser <a href="https://gwn_<mac>.local">https://gwn_<mac>.local
 For example, if a GWN7600 has the MAC address 00:0B:82:8B:58:30, this unit can be accessed by typing https://gwn_000b828b5830.local/ on the browser.

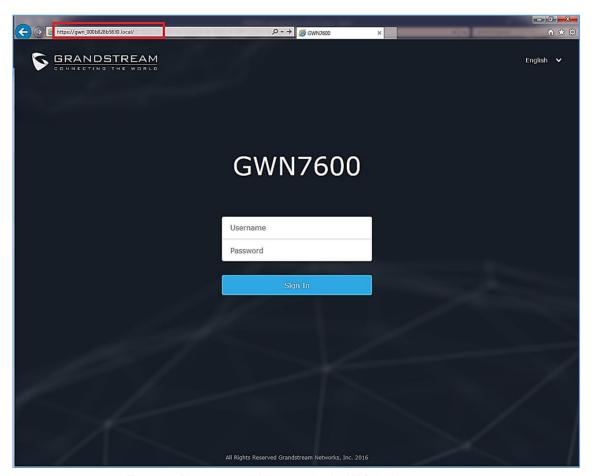


Figure 10: Discover the GWN7600 using its MAC Address





Method 2: Discover the GWN7600 using GWN Discovery Tool

- Download and install GWN Discovery Tool from the following link: http://www.grandstream.com/support/tools
- 2. Open the GWNDiscoveryTool, click on **Select** to define the network interface, then click on **Scan**.
- 3. The tool will discover all GWN7600 Access Points connected on the network showing their MAC, IP addresses and firmware version.
- 4. Click on **Manage Device** to be redirected directly to the GWN7600's configuration interface, or type in manually the displayed IP address on your browser.

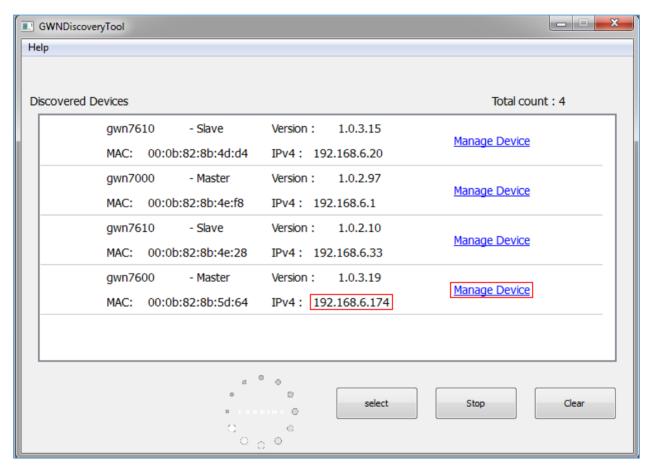


Figure 11: GWN Discovery Tool

Use the Web GUI

Users can access then the GWN7600 using its WebGUI, the following sections will explain how to access and use the Web Interface.





Access Web GUI

The GWN7600 embedded Web server responds to HTTPS GET/POST requests. Embedded HTML pages allow users to configure the device through a Web browser such as Microsoft IE, Mozilla Firefox, Google Chrome and etc.



Figure 12: GWN7600 Web GUI Login Page

To access the Web GUI:

- 1. Make sure to use a computer connected to the same local Network as the GWN7600.
- 2. Ensure the device is properly powered up.
- 3. Open a Web browser on the computer and type in the URL using the MAC address as shown in Discover the GWN7600 or the IP address using the following format:

https://IP Address

4. Enter the administrator's login and password to access the Web Configuration Menu. The default administrator's username and password are "admin" and "admin".

WEB GUI Languages

Currently the GWN7600 series web GUI supports *English* and *Simplified Chinese*.

Users can select the displayed language at the upper right of the web GUI either before or after logging in.



Figure 13: GWN7600 Web GUI Language (Login page)





Figure 14: GWN7600 Web GUI Language (Web Interface)

Overview Page

Overview is the first page shown after successful login to the GWN7600's Web Interface. Overview page provides an overall view of the GWN7600's information presented in a Dashboard style for easy monitoring.

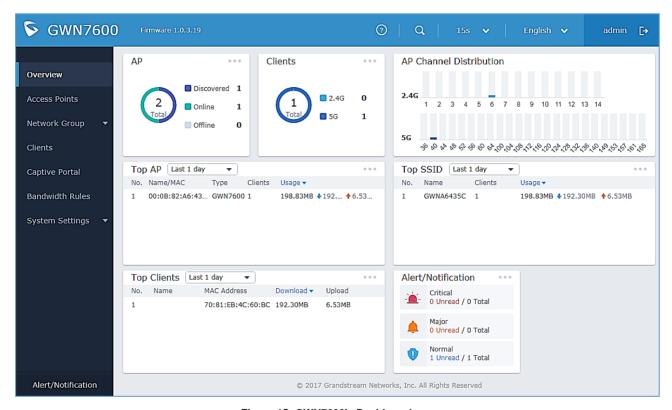


Figure 15: GWN7600's Dashboard

Users can quickly see the status of the GWN7600 for different items, please refer to the following table for each item:

Table 5: Overview

AD	Shows the number of Access Point that are Discovered, Paired(Online)
AP	and Offline. Users may click on to go to Access Points page for basic and advanced configuration options for the APs
	Shows the total number of connected clients, and a count for clients
Clients	connected to each Channel. Users may click on to go to Clients
	page for more options.





AP Channel Distribution	Shows the Channel used for all APs that are paired with this Access Point.
Тор АР	Shows the Top APs list, users may assort the list by number of clients connected to each AP or data usage combining upload and download. Users may click on to go to Access Points page for basic and advanced configuration options for the APs.
Top SSID	Shows the Top SSIDs list, users may assort the list by number of clients connected to each SSID or data usage combining upload and download. Users may click on to go to Network Group page for more options.
Top Clients	Shows the Top Clients list, users may assort the list of clients by their upload or download. Users may click on to go to Clients page for more options.
Alert/Notification	Shows 3 types of Alert/Notifications: Critical, Major and Normal. Users can click to pop up the list of Alert and Notifications.

Note that Overview page in addition to other tabs can be updated each 15s, 1min ,2min and 5min or Never by clicking in the upper bar menu (Default is 15s).

Save and Apply Changes

When clicking on "Save" button after configuring or changing any option on the web GUI pages. a message mentioning the number of changes will appear on the upper menu (See Figure 16).



Figure 16: Apply Changes





USING GWN7600 AS STANDALONE ACCESS POINT

The GWN7600 can be used in Standalone mode, where it can act as Master Access Point Controller or in Slave mode and managed by another GWN7600/GWN7610 Master.

This section will describe how to use and configure the GWN7600 in standalone mode.

Connect to GWN7600 Default Wi-Fi Network

GWN7600 can be used as standalone access point out of box, or after factory reset with Wi-Fi enabled by default.

After powering the GWN7600 and connecting it to the network, GWN7600 will broadcast a default SSID based on its MAC address **GWN [MAC's last 6 digits]** and a random password.

Note that GWN7600's default SSID and password information are printed on the MAC tag of the unit as shown on the below figure.

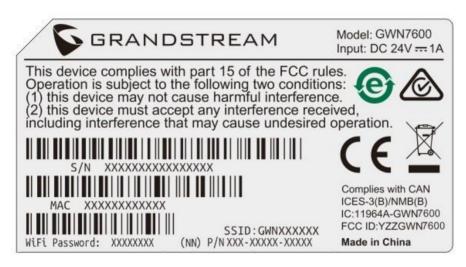


Figure 17: MAC Tag Label





Using GWN7600 as Master Access Point Controller

Master Mode allows a GWN7600 to act as an Access Point Controller managing other GWN76XX access points. This will allow users adding other access points under one controller and managing them in an easy and a centralized way.

Master/Slave mode is helpful with large installations that needs more coverage area zones with the same controller.



Figure 18: Login Page

At factory reset, "Set unit as Master" will be checked by default, click on "Sign In" after typing the admin's username and password.



Warning:

"Set unit as Master" option will forbid the GWN7600 Access Point from being paired by other Master GWN76XX, and can only act as a Master Access point controller.

Users will need to perform a factory reset to the GWN7600, or unpair it from the initial GWN76XX in order to make it open to Master Access Point mode again.

Login Page

After login, users can use the Setup Wizard tool to go through the configuration setup, or exit and configure it manually. Setup Wizard can be accessed anytime by clicking on while on the web interface.







Figure 19: Setup Wizard

Discover and Pair Other GWN7600 Access Point

To Pair a GWN76XX access point connected to the same Network as the GWN7600 follows the below steps:

1. Connect to the GWN7600 Web GUI as Master and go to Access Points.

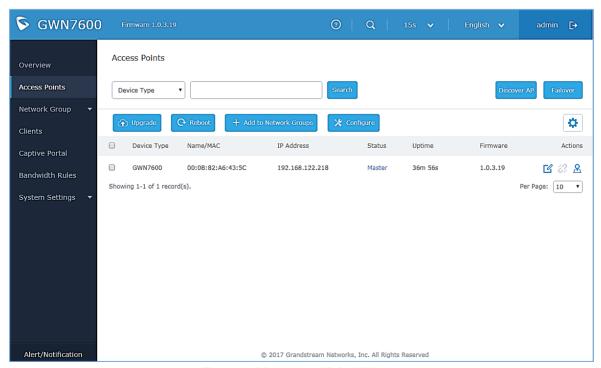


Figure 20: Discover and Pair GWN7600

2. Click on page will appear. piscover AP, in order to discover access points within GWN7600's Network, the following







Figure 21: Discovered Devices

- 3. Click on Pair under Actions, in order to pair the discovered access point as slave with the GWN7600 acting as Master.
- 4. The paired GWN7600 will appear Online, users can click on to unpair it.



Figure 22:GWN7600 online

5. Users can click on next to Master or paired access point to check device configuration for its status, users connected to it and configuration. Refer to below table for Device Configuration tabs.

Table 6: Device Configuration

Field	Description
Status	Shows the device's status information such as MAC, Product Model, Part Number, Boot Version, Firmware version, IP Address, Link Speed, Uptime, and Users count via different Radio channels.
Clients	Shows the connected Users to the GWN7600 access point.
Configuration	 Device Name: Set GWN7600's name to be shown next to MAC address. Fixed IP: Set a static IP for the GWN7600, default is unchecked. Frequency: Set the GWN7600's frequency, it can be either 2.4GHz, 5GHz or Dual-band. Band Steering: When Frequency is set to Dual-Band, users can check this option to enable Band Steering on the Access Point, this will help redirecting clients to a radio band accordingly for efficient use and to benefit from the maximum throughput supported by the client.





- Mode: Choose the mode for the frequency band, 802.11n/g/b for 2.4 GHz.
- Channel Width: Choose the Channel Width, note that wide channel will give better speed/throughput, and narrow channel will have less interference. 20Mhz is suggested in very high-density environment.
- 40MHz Channel Location: Configure the 40MHz channel location when using 20MHz/40MHz in Channel Width, users can set it to be Secondary below Primary, Primary below Secondary or Auto.
- Channel: Select Auto, or a specified channel, default is Auto.
 Note that the proposed channels depend on Country Settings under System Settings Maintenance.
- Enable Short Guard Interval: Check to activate this option to increase throughput.
- Active Spatial Streams: Choose active spatial stream if Auto, 1 or 2 streams.
- Radio Power: Set the Radio Power, it can be Low, Medium or High.
- Allow Legacy Devices(802.11b): Check to support 802.11b devices to connect the AP in 802.11n/g mode.
- Custom Wireless Power(dBm): allows users to set a custom wireless power for both 5GHz/2.4GHz band, the value of this field must be between 1 and 31.

Note

If a GWN7600 is not being discovered or the pair icon is grey color, make sure that it is not being paired with another GWN76XX Access Point acting as Master Controller, if yes users will need to unpair it first, or reset it to factory default settings in order to make it available for pairing by other GWN76XX Access Point Controller

AP Location:

GWN supports a handy feature which allows users to locate other Access points by blinking LED. To use the feature, navigate on the master web GUI under "Access Points" page and click on the icon April 2. near the desired April 2. and it corresponding unit will start blinking the LEDs.





Failover Master

In a Master-Slave architecture, having a backup Master is critical for redundancy and failover function, thus, and in order to avoid a single point of failure in your wireless network, you can specify a slave AP as failover master. Whenever it detects the master is down, it will promote itself as failover master within a time frame of around 20~30 minutes by entering failover mode. After then, if the master AP comes back, failover master will automatically go back to slave mode, or if the master doesn't come back to alive, Administrator can login using "failover" account to turn the failover master as true master and take over all controls.

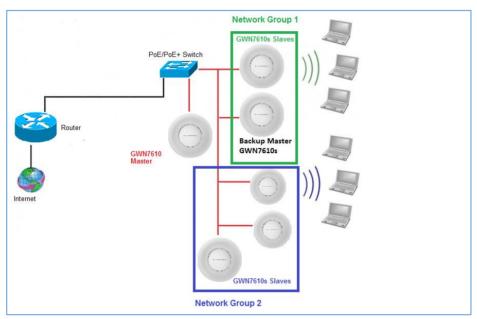


Figure 23: Failover Master

Users could select the failover Master by following below steps:

- Log into web GUI of the master GWN.
- Go to Access Points page.
- Press Failover
- Select from the available paired Slave Aps the candidate to become a failover Master.
- Save and Apply the settings.

Failover Mode

Once failover slave has been selected, the primary master will send the configuration of the network to the failover slave and the slave will start monitoring the status of the primary master to detect any failure for any reason (network connection loss, power outage).

In case of failure, the failover slave will promote itself to a temporary backup master while waiting for the primary master to come back.

During the failover mode users could access the web GUI of the failover slave using a special failover account with same admin password.





- Username = failover
- Password = admin password

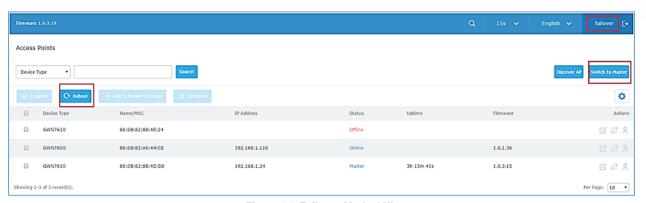


Figure 24: Failover Mode GUI

The failover mode has only read permission on the configuration and very limited options, users still can reboot other slave Access points in case it is needed.

Users also can press on « **Switch to master** » button in order to set the failover slave as the new primary master of the wireless network, once this is done they have full write permission control over the web GUI option as usual.





NETWORK GROUPS

When using GWN7600 as Master Access Point, users have the ability to create different Network groups and adding GWN7600 Slave Access Points.

Network Groups

Log in as Master to the GWN7600 WebGUI and go to Network Group→Network Group.

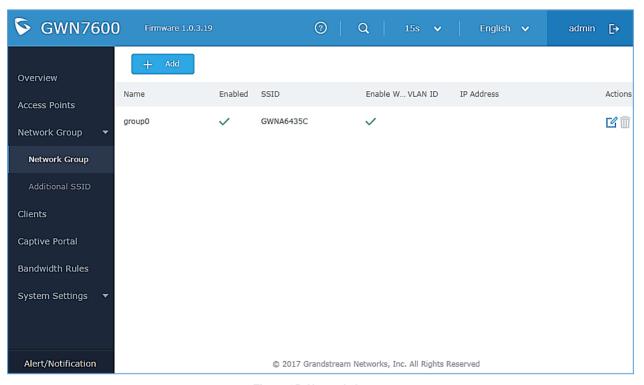


Figure 25: Network Group

The GWN7600 will have a default network group named group0, click on to edit it, or click on to add a new network group.





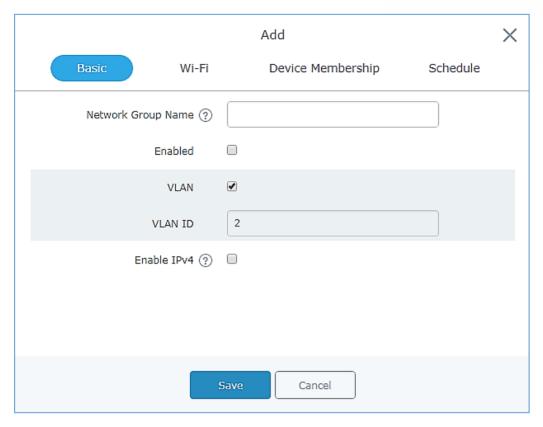


Figure 26: Add a New Network Group

When editing or adding a new network group, users will have four tabs to configure:

• Basic: Used to name the network group, and set a VLAN ID if adding a new network group

Table 7: Basic configuration of group

Field	Description
Network Group Name	Set the name of the new group.
Enabled	Enable the new group.
VLAN	Check to enable/disable VLAN.
VLAN ID	Set a VLAN ID.
Enable IPv4	Check to enable/disable IPv4
IPv4 Static Address	Configure the static address of IPv4
IPv4 Subnet Mask	Configure the corresponding subnet mask of IPv4
DHCP Enabled for IPv4	Check to enable DHCP for IPv4
DHCP Start Address	Set the start address for DHCP
DHCP End Address	Set the end address for DHCP





DHCP Leases Time	Set the DHCP lease time for the clients
DHCP Options	Add the Option items for DHCP, detailed option contents can be found via: https://wiki.openwrt.org/doc/howto/dhcp.dnsmasq
DHCP Gateway	Set the gateway for DHCP, and it is better to set the gateway address out of the DHCP pool.
DHCP Preferred DNS	Set the preferred DNS for DHCP
DHCP Alternated DNS	Set the alternated DNS for DHCP

• Wi-Fi: Please refer to the below table for Wi-Fi tab options

Table 8: Wi-Fi

Field	Description
Enable Wi-Fi	Check to enable Wi-Fi for the network group.
SSID	Set or modify the SSID name.
SSID Band	Select the Wi-Fi band the GWN will use, three options are available: • Dual-Band • 2.4GHz • 5Ghz
SSID Hidden	Select to hide SSID. SSID will not be visible when scanning for Wi-Fi, to connect a device to hidden SSID, users need to specify SSID name and authentication password manually.
Wireless Client Limit	Configure the limit for wireless client. If there's an SSID per-radio on a network group, each SSID will have the same limit. So, setting a limit of 50 will limit each SSID to 50 users independently. If set to 0 the limit is disabled.
Enable Captive Portal	Click on the checkbox to enable the captive portal feature.
Captive Portal Policy	Select the captive portal policy already created on the "CAPTIVE PORTAL" web page to be used in the created SSID.
Security Mode	 WEP 64-bit: Using a static WEP key. The characters can only be 0-9 or A-F with a length of 10, or printable ASCII characters with a length of 5. WEP 128-bit: Using a static WEP key. The characters can only be 0-9 or A-F with a length of 26, or printable ASCII characters with a length of 13.





	 WPA/WPA2: Using "PSK" or "802.1x" as WPA Key Mode, with "AES" or "AES/TKIP" Encryption Type. WPA2: Using "PSK" or "802.1x" as WPA Key Mode, with "AES" or "AES/TKIP" Encryption Type. Recommended configuration for authentication. Open: No password is required. Users will be connected without authentication. Not recommended for security reasons.
WEP Key	Enter the password key for WEP protection mode.
WPA Key Mode	Select key mode (Pre-Shared Key or 802.1X Authentication).
WPA Encryption Type	Select Encryption type (AES or AES/TKIP).
Radius Sever Address	Configures Radius authentication server address.
Radius Server Port	Configures Radius Server Listening port (default is: 1812).
Radius Server Secret	Enter the secret password for client authentication with radius server.
Radius Accounting Server	Configures the address for the radius accounting server.
Radius Accounting Server Port	Configures Radius accounting server listening port (defaults to 1813).
Radius Accounting Server Secret	Enter the secret password for client authentication with radius accounting server.
Use MAC Filtering	Choose Blacklist/Whitelist to specify MAC addresses to be excluded/included from connecting to the zone's Wi-Fi. Default is Disabled.
Enable Dynamic VLAN	When enabled, clients will be assigned IP address form corresponding VLAN configured on the Radius user profile.
Client Isolation	Client isolation feature blocks any TCP/IP connection between connected clients to GWN7600's Wi-Fi access point. Client isolation can be helpful to increase security for Guest networks/Public Wi-Fi. Three modes are available: • Internet Mode: Wireless clients will be allowed to access only the internet services and they cannot access any of the management services, either on the router nor the access points GWN7600. • Gateway MAC Mode: Wireless clients can only communicate with the gateway, the communication between clients is blocked and they cannot access any of the management services on the GWN7600 access points.





	Radio Mode: Wireless clients can access to the internet services, GWN7xxx router and the access points GWN7600 but they cannot communicate with each other.
Gateway MAC Address	This field is required when using Client Isolation , so users will not lose access to the Network (usually Internet). Type in the default LAN Gateway's MAC address (router's MAC address for instance) in hexadecimal separated by ":". Example: 00:0B:82:8B:4D:D8
RSSI Enabled	Check to enable RSSI function, this will lead the AP to disconnect users below the configured threshold in Minimum RSSI (dBm) .
Minimum RSSI (dBm)	Enter the minimum RSSI value in dBm. If the signal value is lower than the configured minimum value, the client will be disconnected. The input range is from "-94" or "-1".
Enable Voice Enterprise	 Check to enable/disable Voice Enterprise. The roaming time will be reduced once enable voice enterprise. The 802.11k standard helps clients to speed up the search for nearby APs that are available as roaming targets by creating an optimized list of channels. When the signal strength of the current AP weakens, your device will scan for target APs from this list. When your client device roams from one AP to another on the same network, 802.11r uses a feature called Fast Basic Service Set Transition (FT) to authenticate more quickly. FT works with both pre-shared key (PSK) and 802.1X authentication methods. 802.11v allows client devices to exchange information about the network topology, including information about the RF environment, making each client network aware, facilitating overall improvement of the wireless network. Note: 11R is required for enterprise audio feature, 11V and 11K are optional.
Enable 11R	Check to enable 802.11r
Enable 11K	Check to enable 802.11k
Enable 11V	Check to enable 802.11v
Upstream Rate	Set the maximum upstream rate
Downstream Rate	Set the maximum downstream rate





• Device Membership: Used to add or remove paired access points to the network group.

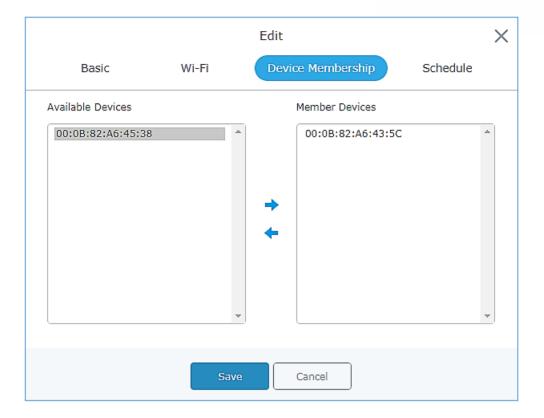


Figure 27: Device Membership

Click on → to add the GWN7600 to the network group, or click on ← to remove it.

Users can Also add a device to a Network Group from Access Points Page:





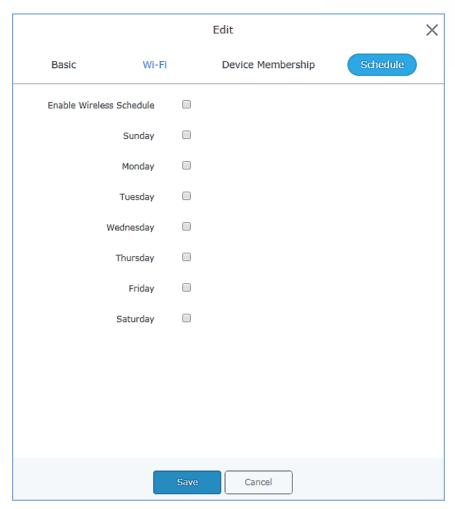


Figure 28: WiFi Schedule

If users want to schedule the AP operation time, "Enable Wireless Schedule" should be selected first, and then, choose the days the AP needs to work, at last, click on "Save" to save configuration.

X Add to Network Groups

- Select the desired AP to add to a Network Group and click on

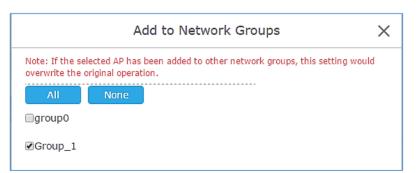


Figure 29: Add AP to Network Group





Create an additional SSID under same Network Group

Users can also create an additional SSID under the same group.

To create an additional SSID go to Network Group-Additional SSID.

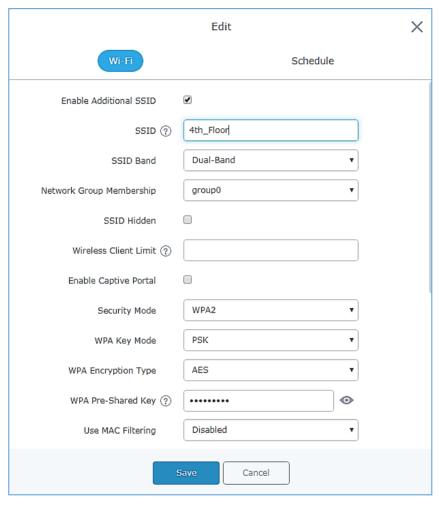


Figure 30: Additional SSID

Select one of the available network groups from Network Group Membership dropdown menu, this will create an additional SSID with the same Device Membership configured when creating the main network group.



Figure 31: Additional SSID Created


Click on $\stackrel{|}{\mathbb{U}}$ to delete the additional SSID, or $\stackrel{|}{\mathbb{C}}$ to edit it





CLIENTS CONFIGURATION

Users can access clients list connected to GWN7600 Group from GWN7600 **Web GUI→Clients** to perform different actions to wireless clients.

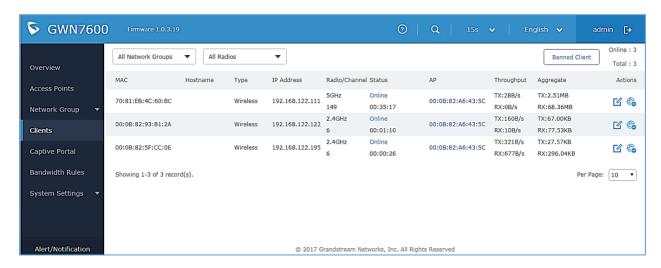

- Click on under Actions to check a client's status and modify basic settings such as Device's Name.
- Click on to block a client's MAC address from connecting to the zone's network group.
- Click on Banned Client to add or remove a client from banned client list.

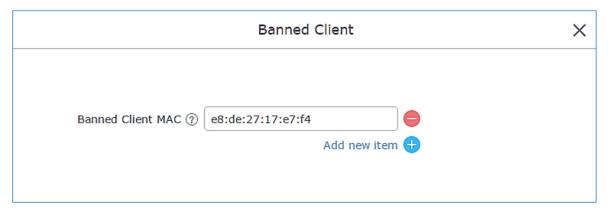


Figure 32: Ban/Unban Client

• Users can scroll down to the down of the client's page to paginate between clients list.



Figure 33: Paginate between client's list

Users can filter the clients by selecting network group category or radio category.





LED SCHEDULE

GWN7600 Access Points series support also the LED schedule feature. This feature is used to set the timing when the LEDs are ON and when they will go OFF at customer's convenience.

This can be useful for example when the LEDs become disturbing during some periods of the day, this way with the LED scheduler, you can set the timing so that the LEDs are off at night after specific hours and maintain the Wi-Fi service for other clients without shutting down the AP.

To configure LED schedule, on the GWN7600 WebGUI navigate to "System Settings->LEDs".

Following options are available:

Table 9: LEDs

Field	Description
LEDs Always Off	Configure whether to disable the AP LED dictator
Schedule Stop Hour	Configure the hour the AP LED dictator is disabled. The valid range is from 0 to 23. And the value cannot be empty.
Schedule Start Hour	Configure the minute the AP LED dictator is disabled. The valid range is from 0 to 59. $$
Schedule Stop Minute	Configure the hour the AP LED dictator is enabled. The valid range is from 0 to 23. And the value cannot be empty.
Schedule Start Minute	Configure the minute the AP LED dictator is enabled. The valid range is from 0 to 59. $$
Schedule Weekdays list of schedule days	Select the days the AP LED is desired to be disabled or enabled.

Following example on the next page sets the LEDs to be turned on from 8am till 8pm every day.





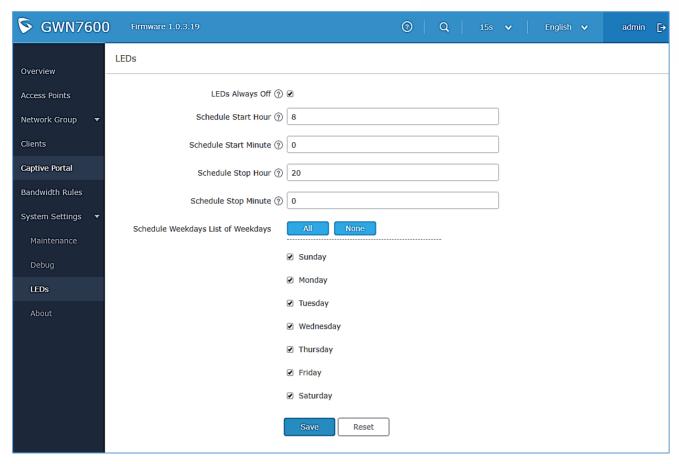


Figure 34: LED Scheduling Sample





CAPTIVE PORTAL

Captive Portal feature on GWN7600 AP helps to define a Landing Page (Web page) that will be displayed on Wi-Fi clients' browsers when attempting to access Internet. Once connected to a GWN7600 AP, Wi-Fi clients will be forced to view and interact with that landing page before Internet access is granted. The Captive Portal feature can be configured from the GWN7600 Web page under "Captive Portal". The page contains three tabs: **Policy**, **Files** and **Clients**.

Policy

Users can customize a portal policy in this page.

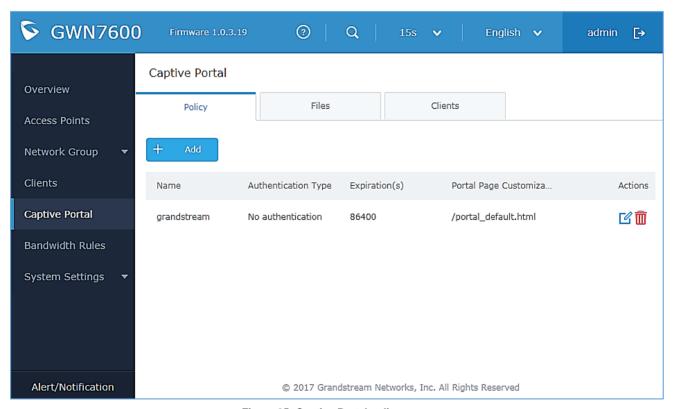


Figure 35: Captive Portal policy







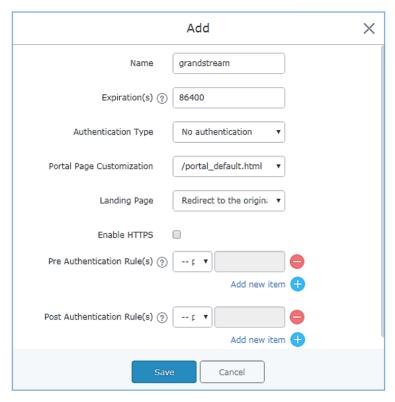


Figure 36: Add a new policy

Below table lists the items policy add page configures.

Table 10: policy add

Field	Description
Name	Enter the name of the Captive Portal policy
Expiration	Configures the period of validity, after the valid period, the client will be re-authenticated again.
Authentication Type	 No Authentication: when choosing this option, the landing page feature will not provide any type of authentication, instead it will prompt users to accept the license agreement to gain access to internet. RADIUS Server: Choosing this option will allow users to set a RADIUS server to authenticate connecting clients. Third Authentication: Choosing this option will allow users to enable authentication Facebook or WeChat.
Radius Server Address	Fill in the IP address of the radius server.
Radius Server Port	Set the radius server port, the default value is 1812.





Radius Server Key	Fill in the key of the radius server.
Radius Authentication Method	Select the radius authentication method, 3 methods are available: PAP, CHAP and MS-CHAP.
WeChat Authentication	Check to enable/disable WeChat Authentication
Shop ID	Fill in the Shop ID that offers WeChat Authentication.
	·
APP ID	Fill in the APP ID provided by the WeChat in its web registration page
SecretKey	Set the key for the portal, once clients want to connect to the WiFi, they should enter this key.
Facebook Authentication	Check to enable/disable Facebook Authentication
Facebook App ID	Fill in the Facebook App ID.
Facebook APP Key	Set the key for the portal, once clients want to connect to the WiFi, they should enter this key.
Portal Page Customization	Select the customized portal page.
Landing Page	Choose the landing page, 2 options are available: redirect to the origin and redirect to external page.
Redirect External Page	Once the landing page is set to redirect to external page, user should set the
URL Address	URL address for redirecting.
Enable HTTPS	Check to enable/disable HTTPS service.
Pre-Authentication Rule(s)	Set the Pre-Authentication Rules for temporarily release the IP or ports of the devices (e.g.: subnet:192.168.10.1/12, TCP: TCP src 80 dst 80, UDP: UDP src 80 dst 80, SSH, telnet)
Post Authentication Rule(s)	Set the Post Authentication Rules (e.g.: subnet:192.168.10.1/12, TCP: TCP src 80 dst 80, UDP: UDP src 80 dst 80, SSH, telnet, http, https)
Rule(s) Post Authentication	devices (e.g.: subnet:192.168.10.1/12, TCP: TCP src 80 dst 80, UDP: UDP src 80 dst 80, SSH, telnet) Set the Post Authentication Rules (e.g.: subnet:192.168.10.1/12, TCP: TCP src

Files

Files configuration page allows users to view and upload HTML pages and related files (images...).

The captive portal uses two HTML pages using authentication scenarios, either **portal_default.html** which doesn't provide authentication, only accepting license agreement, while **portal_pass.html** provides textboxes for authentication, Wired or Wi-Fi clients will be redirected to one of these pages before accessing Internet. The following figure shows **portal_default.html** page:





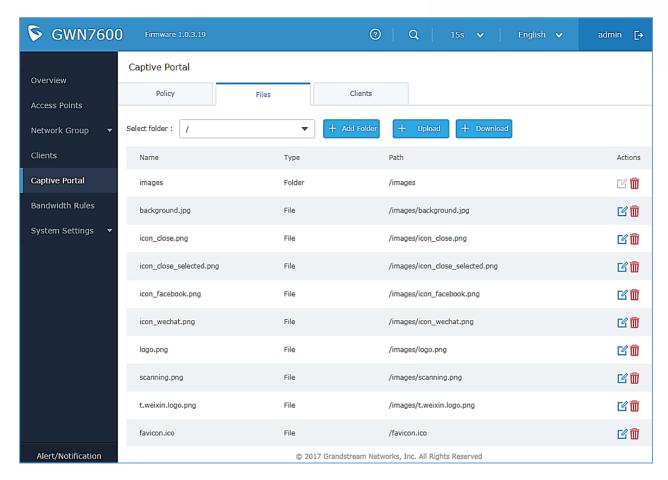


Figure 37: Captive Portal Files

User can add folder in corresponding folder by selecting the folder and click on



Click on to upload a file from local device.

Click on to download the files in Captive Portal folder.

to edit the corresponding file, in another word, to replace the file with a new one.

Click on W to delete the file.





Clients

This section lists the clients connected or trying to connect to Wi-Fi.

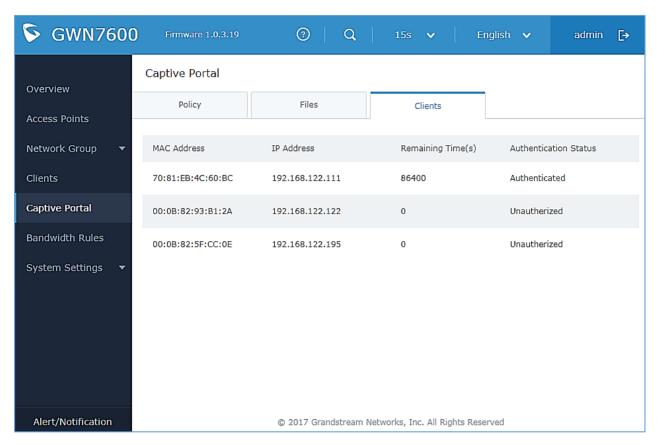


Figure 38: Captive Portal Clients





BANDWIDTH RULES

The bandwidth rule is a GWN7600 feature that allows users to limit bandwidth utilization per SSID or client (MAC address or IP address).

This option can be configured from the GWN7600 WebGUI under "Bandwidth Rules".

Click to add a new rule, the following table provides an explanation about different options for bandwidth rules.

Table 11: Bandwidth Rules

Field	Description
Туре	Choose the type of rule to be applied on bandwidth utilization from the dropdown list, three options are available: SSID: Set a bandwidth limitation on the SSID level. MAC: Set a bandwidth limitation per MAC address. IP Address: Set a bandwidth limitation per IP address.
SSID	Select the SSID to which the limitation will be applied, this option appears only when SSID type is selected.
MAC	Enter the MAC address of the device to which the limitation will be applied, this option appears only when MAC type is selected.
IP address	Enter the IP address of the device to which the limitation will be applied, this option appears only when IP Address type is selected.
Network Group	Choose the network group to which belongs the device, this option is available when choosing either MAC or IP address type.
Upstream Rate	Specify the limit for the upload bandwidth using Kbps or Mbps.
Downstream Rate	Specify the limit for the download bandwidth using Kbps or Mbps.

The following figure shows an example of MAC address rule limitation.





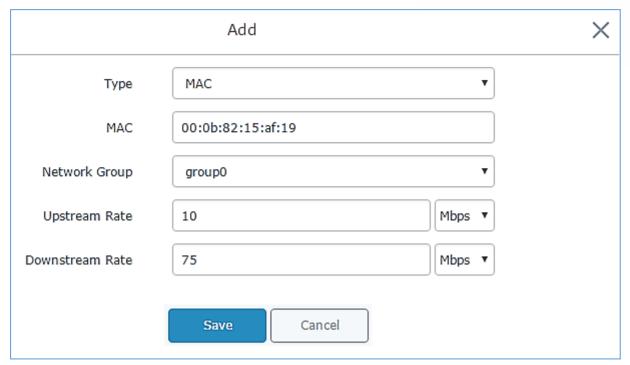


Figure 39: MAC Address Bandwidth rule

The following figure shows examples of bandwidth rules:

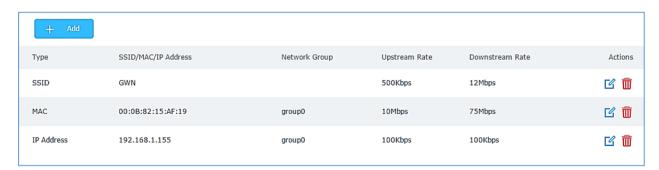


Figure 40: Bandwidth Rules

Note:

The same settings for bandwidth management are available from the following menus:

Per-SSID

Navigate on the web GUI under "Network Group→Add /Edit→WiFi" and you can set the Upstream and Downstream rate in Mbps.

Per-Client

Navigate on the web GUI under "Clients→Edit→Bandwidth Rules" where you can set the Upstream and Downstream rate in Mbps





SYSTEM SETTINGS

Maintenance

Users can access Maintenance page from GWN7600 WebGUI→System Settings→ Maintenance.

Basic

Basic page allows Country and Time configuration.

Table 12: Basic

Field	Description
Country	Select the country from the drop-down list. This can affect the number of channels depending on the country standards.
Time Zone	Configure time zone for the GWN7600. Make sure to reboot the device to take effect.
NTP Server	Configure the IP address or URL of the NTP server. The device will obtain the date and time from the configured server.
Date Display Format	Change the Date Display Format, three options are possible YYYY/MM/DD, MM/DD/YYYY and DD/MM/YYYY

Upgrade

The Upgrade Web page allows upgrade related configuration.

Table 13: Upgrade

145.6 101 099.440	
Field	Description
Authenticate Config File	Authenticate configuration file before acceptance. Default is disabled.
XML Config File Password	Enter the password for encrypting the XML configuration file using OpenSSL. The password is used to decrypt the XML configuration file if it is encrypted via OpenSSL.
Upgrade Via	Specify uploading method for firmware and configuration. 3 options are available: HTTP, HTTPS and TFTP.
Firmware Server	Configure the IP address or URL for the firmware upgrade server.
Config Server	Configure the IP address or URL for the configuration file server.
Check/Download New	Choose whether to enable or disable automatic upgrade and provisioning
Firmware at Boot	after reboot. Default is disabled.
Allow DHCP options 66	Configure whether to allow DHCP options 66 and 63 to override the upgrade
and 43 override	and provisioning setting.
Automatic Upgrade(m)	Specify the time to check for firmware upgrade (in minutes).





Reboot	Click on Reboot button to reboot the device.
Download Configuration	Click on Download to download the device's configuration file.
Upload Configuration	Click on Upload to upload the device's configuration file.
Upgrade Now	Click on Upgrade, to launch firmware/config file provisioning. Please make sure to Save and Apply changes before clicking on Upgrade.
Factory Reset	Click on Reset to restore the GWN7600 to factory default settings

Access

The Access Web page provide configuration for admin and user password.

Table 14: Access

Field	Description
Current Administrator Password	Enter the current administrator password
New Administrator Password	Change the current password. This field is case sensitive with a maximum length of 32 characters.
Confirm New Administrator Password	Enter the new administrator password one more time to confirm.
New User Password	Configure the password for user-level Web GUI access. This field is case sensitive with a maximum length of 32 characters.
Confirm New User Password	Enter the new User password again to confirm.

Syslog

The syslog Web page provides configuration settings for syslog.

Table 15: Syslog

Field	Description
Syslog Server	Enter the IP address or URL of Syslog server.
Syslog Level	Select the level of Syslog, 5 levels are available: None, Debug, Info, Warning and Error .

Debug

GWN7600 offers many features for managing and monitoring connected clients to network groups, as well as debugging and troubleshooting





Capture

This section is used to generate packet trace captures from network groups interfaces which will help to sniff packets within the network group for troubleshooting purpose or monitoring...Users will need to plug a USB device to the USB port on the back of the GWN7600.

To access Capture page, go to System Settings→Debug→Capture.

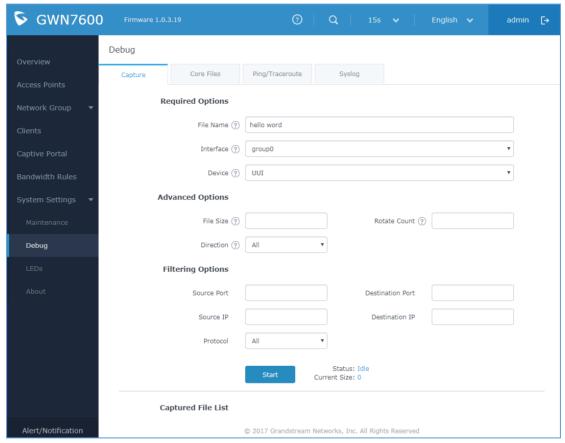


Figure 41: Capture page

The below table will show different fields used on debug page

Table 16: Debug

Required Options	
File Name	Enter the name of the capture file that will be generated.
Interface	Choose a network group as Interface on which the traffic will be captured.
Device	Choose a device plugged to USB port to save the capture once started.
Advanced Options	
File Size	Set a File size that the capture will not exceed.
Rotate Count	Set a value for rotating captures.





Direction	Choose if you want to get all traffic or only outgoing or incoming to the chosen interface.
Filtering Options	
Source Port	Set the Source Port to filter capture traffic coming from the defined source port.
Destination Port	Set the Destination Port to filter capture traffic coming from the defined port.
Source IP	Set the Source IP to filter capture traffic coming from the defined source IP.
Dest IP	Set the Destination IP to filter capture traffic coming from the defined destination IP.
Protocol	Choose ALL or a specific protocol to capture (IP, ARP, RARP, TCP, UDP, ICMP, IPv6)
Click on Start to s	tart capturing on a certain device plugged to the USB port.
Click on Stop to stop the capture.	
Click on List to show the captured files on a chosen device, users could check the capture files details.	
Click on Clear to d	lelete all files.
Click on inext to a c	capture file to download it on a local folder.

Click on to delete the corresponding capture file.





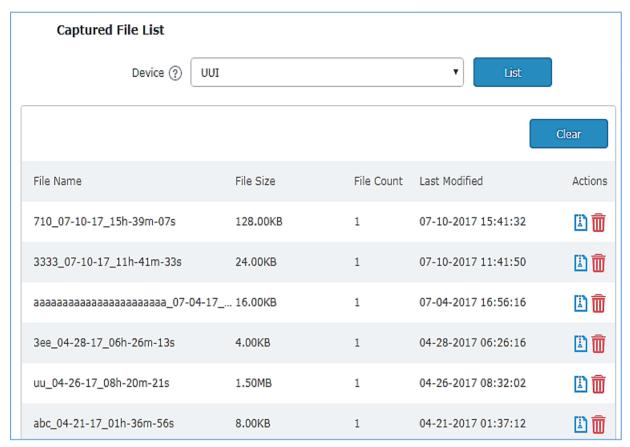


Figure 42: Capture Files

Core Files

The Core Files Web page displays core dumps generated when the GWN7600 crashes. This is helpful for troubleshooting purposes, if any core dump found on this page please help to contact our support team for further investigation using following link: https://helpdesk.grandstream.com/

Ping/Traceroute

Ping and Traceroute are useful debugging tools to verify reachability with other clients across the network. The GWN7600 offers both Ping and Traceroute tools for IPv4 and IPv6 protocols.

To use these tools, go to GWN7600 **WebGUI→System Settings→Debug→Ping/Traceroute.**





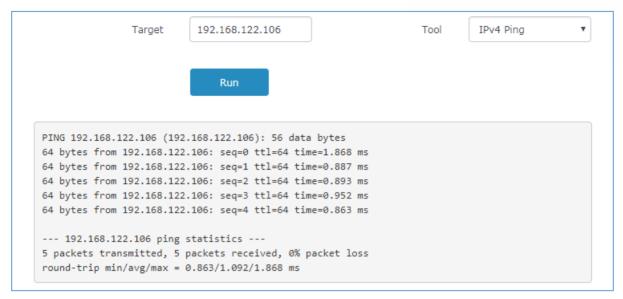


Figure 43: IP Ping

- Next to Tool choose from the dropdown menu: IPv4 Ping for an IPv4 Ping test to Target
 - IPv6 Ping for an IPv6 Ping test to Target
 - IPv4 Traceroute for an IPv4 Traceroute to Target
 - IPv6 Traceroute for an IPv6 Traceroute to Target
- Type in the destination's IP address in Target field.
- Click on Run.

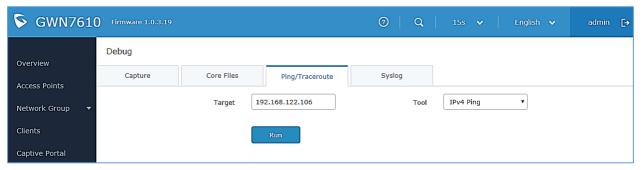


Figure 44: IP Traceroute

Syslog

The syslog Web page displays logs generated by the GWN7600 for troubleshooting purpose as shown in figure below.

Syslog messages are also displayed in real time under Web GUI→System Settings→Debug→Syslog.





Debug				
Core Files	Ping/Traceroute	Syslog		
1. Thu Jun 22 02:17:49 2017 daemon.info preheat: main:102 tempture:54 stop HEAT				
2. Thu Jun 22 02:17:50 2017 user.debug syslog: DBG: parse_data_l2: ap_msg=0x5				
3. Thu Jun 22 02:17:50 2017 user.debug syslog: DBG: recv nbrcom data len=304, send to module -1062700369				
4. Thu Jun 22 02:17:50 2017 user.err syslog: DBG: get -1062700369 module unix domain fail				
5. Thu Jun 22 02:17:52 2017 user.debug syslog: DBG: test =bgscan_timer_handler				
6. Thu Jun 22 02:17:52 2017 user.debug syslog: DBG: test bgscan param set ifname= ath0				
7. Thu Jun 22 02:17:52 2017 user.err syslog: DBG: ioctl[SIOCSIWSCAN]:count=9, ifname=ath0 success				
8. Thu Jun 22 02:17:52 2017 user.debug syslog: DBG: test bgscan param set ifname= ath1				
9. Thu Jun 22 02:17:52 2017 user.err syslog: DBG: ioctl[SIOCSIWSCAN]:count=9, ifname=ath1 success				
10. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: netlink: event IFLA_WIRELESS=11, cmd=11, data=◘				
11. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: netlink: SIOCGIWSCAN###, ifname=ath0				
12. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: ath0 Scan completed :				
13. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: Cell 01 - Address: 00:0B:82:A6:43:61				
14. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: ###macaddr=00:0b:82:a6:43:61				
15. Thu Jun 22 02:17:59 2017 user.debug syslog: DBG: Grandstream IE:				
16. Thu Jun 22 02:17:59 2017 user.debuq sysloq: DBG: ######mac:00:0b:82:a6:43:61,chan=1 © 2017 Grandstream Networks, Inc. All Rights Reserved				

Figure 45: Syslog





UPGRADING AND PROVISIONING

Upgrading Firmware

The GWN7600 can be upgraded to a new firmware version remotely or locally. This section describes how to upgrade your GWN7600.

Upgrading via WEB GUI

The GWN7600 can be upgraded via TFTP/HTTP/B by configuring the URL/IP Address for the TFTP/HTTP/S server and selecting a download method. Configure a valid URL for TFTP, HTTP or HTTPS; the server name can be FQDN or IP address.

Examples of valid URLs:

firmware.grandstream.com/BETA 192.168.5.87

The upgrading configuration can be accessed via **Web GUI**→**System Settings**→**Maintenance**.

Table 17: Network Upgrade Configuration

Field	Description	
Upgrade Via	Allow users to choose the firmware upgrade method: TFTP, HTTP or HTTPS.	
Firmware Server	Define the server path for the firmware server.	
Check Update on Boot	Allows the device to check if there is a firmware from the configured firmware server at boot.	
Automatic Upgrade check interval(m)	Set the value for automatic upgrade check in minutes.	
Upgrade Now	Click on Upgrade button to begin the upgrade. Note that the device will reboot after downloading the firmware.	

Upgrading Slave Access Points

When the GWN7600 is being paired as slave using another GWN7600 Access Point acting as Controller, users can upgrade their paired access points from the GWN7600 Master Controller.





To upgrade a slave access point, log in to the GWN7600 acting as Master Controller and go to Access Points.

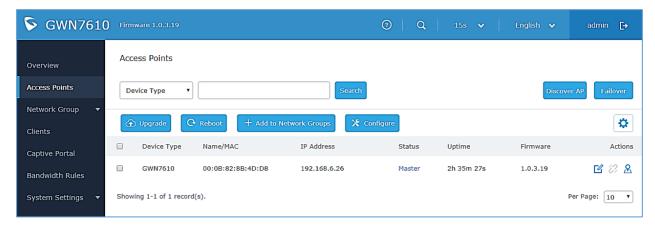


Figure 46: Access Points

Make sure that firmware server path is set correctly under Maintenance, check the desired APs to upgrade,

Upgrade and click on

to upgrade the selected paired access points.

The status of the device will show Upgrading, wait until it finishes and reboots, then it will appear online again.

⚠ Notes:

- Please do not interrupt or power cycle the GWN7600 during upgrading process.
- Master Access Point needs to be upgraded from Web GUI→Svstem Settings -> Maintenance. It cannot be upgraded from Access Points page like the Paired Access Points.

Service providers should maintain their own firmware upgrade servers. For users who do not have TFTP/HTTP/HTTPS server, some free windows version TFTP servers are available for download from http://www.solarwinds.com/products/freetools/free_tftp_server.aspx http://tftpd32.jounin.net

Please check our website at http://www.grandstream.com/support/firmware for latest firmware.





Instructions for local firmware upgrade via TFTP:

- 1. Unzip the firmware files and put all of them in the root directory of the TFTP server;
- 2. Connect the PC running the TFTP server and the GWN7600 to the same LAN segment;
- 3. Launch the TFTP server and go to the File menu→Configure→Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade;
- 4. Start the TFTP server and configure the TFTP server in the GWN7600 web configuration interface;
- 5. Configure the Firmware Server to the IP address of the PC;
- 6. Update the changes and reboot the GWN7600.

End users can also choose to download a free HTTP server from http://httpd.apache.org/ or use Microsoft IIS web server.

Provisioning and backup

The GWN7600 configuration can be backed up locally or via network. The backup file will be used to restore the configuration on GWN7600 when necessary.

Download Configuration

Users can download the GWN7600 configuration for restore purpose under **Web GUI→System**Settings→Maintenance

Click on Download locally the configuration file.

Upload Configuration

Users can upload configuration file to the GWN7600 under **Web GUI→System Settings→Maintenance**

Click on Upload to browse for the configuration to upload.

Please note that the GWN7600 will reboot after the configuration file is restored successfully.

Configuration Server (Pending)

Users can download and provision the GWN7600 by putting the config file on a TFTP/HTTP or HTTPS server, and set Config Server to the TFTP/HTTP or HTTPS server used in order for the GWN7600 to be provisioned with that config server file.





Reset and reboot

Users could perform a reboot and reset the device to factory functions under **Web GUI > System**Settings **> Maintenance** by clicking on button.

Reset

Will restore all the GWN7600 itself to factory settings.

Syslog

On the GWN7600, users could dump the syslog information to a remote server under **Web GUI** > **System Settings** > **Maintenance**. Enter the syslog server hostname or IP address and select the level for the syslog information. Five levels of syslog are available: None, Debug, Info, Warning, and Error.





EXPERIENCING THE GWN7600 WIRELESS ACCESS POINT

Please visit our website: http://www.grandstream.com to receive the most up- to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our <u>product related documentation</u>, <u>FAQs</u> and <u>User and Developer Forum</u> for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or <u>submit a trouble ticket online</u> to receive in-depth support.

Thank you again for purchasing Grandstream GWN7600 Wireless Access Point, it will be sure to bring convenience and color to both your business and personal life

